


MANUAL LONG-ARMS RIVETING TOOL SAR004



<p>SAR004 MANUAL LONG-ARMS RIVETING TOOL FOR BLIND RIVET NUTS: M4, M5, M6, M8, M10</p>	<p>EQUIPMENT:</p> <ul style="list-style-type: none"> - 6 heads - 6 tie-rods
---	--

SPARE PARTS

CODE	DESCRIPTION	Q.TY	CODE	DESCRIPTION	Q.TY
SAR004-01	Handle	1	SAR004-21	Washer	6
SAR004-02	Handle stand	1	SAR004-22	Dado	6
SAR004-03	Screwer sliding tube	1	SAR004-23	Corpo connessione a T	1
SAR004-04	Registration ring nut	1	SAR004-24	Tube	1
SAR004-05	Ball	2	SAR004-25	Nut	1
SAR004-06	Outside body	1	SAR004-26	Screw	1
SAR004-07	Registration ring nut plug	1	SAR004-M4	Tie rod M4	1
SAR004-08	Bearing	2	SAR004-M5	Tie rod M5	1
SAR004-09	Helicoidal shaft	1	SAR004-M6	Tie rod M6	1
SAR004-10	Pin	1	SAR004-M8	Tie rod M8	1
SAR004-11	Knob	2	SAR004-M10	Tie rod M10	1
SAR004-12	Lever	2	SAR004-28	Outer body	1
SAR004-13	Tube	1	SAR004-29	Nut	1
SAR004-14	Registration ring nut	1	SAR004-30	Adjustable pipe	1
SAR004-15	Screw	4	SAR004-T4	Head M4	1
SAR004-16	Washer	18	SAR004-T5	Head M5	1
SAR004-17	Connecting rod	4	SAR004-T6	Head M6	1
SAR004-18	Screw	2	SAR004-T8	Head M8	1
SAR004-19	Screw	2	SAR004-T10	Head M10	1
SAR004-20	Lever-stop	2			

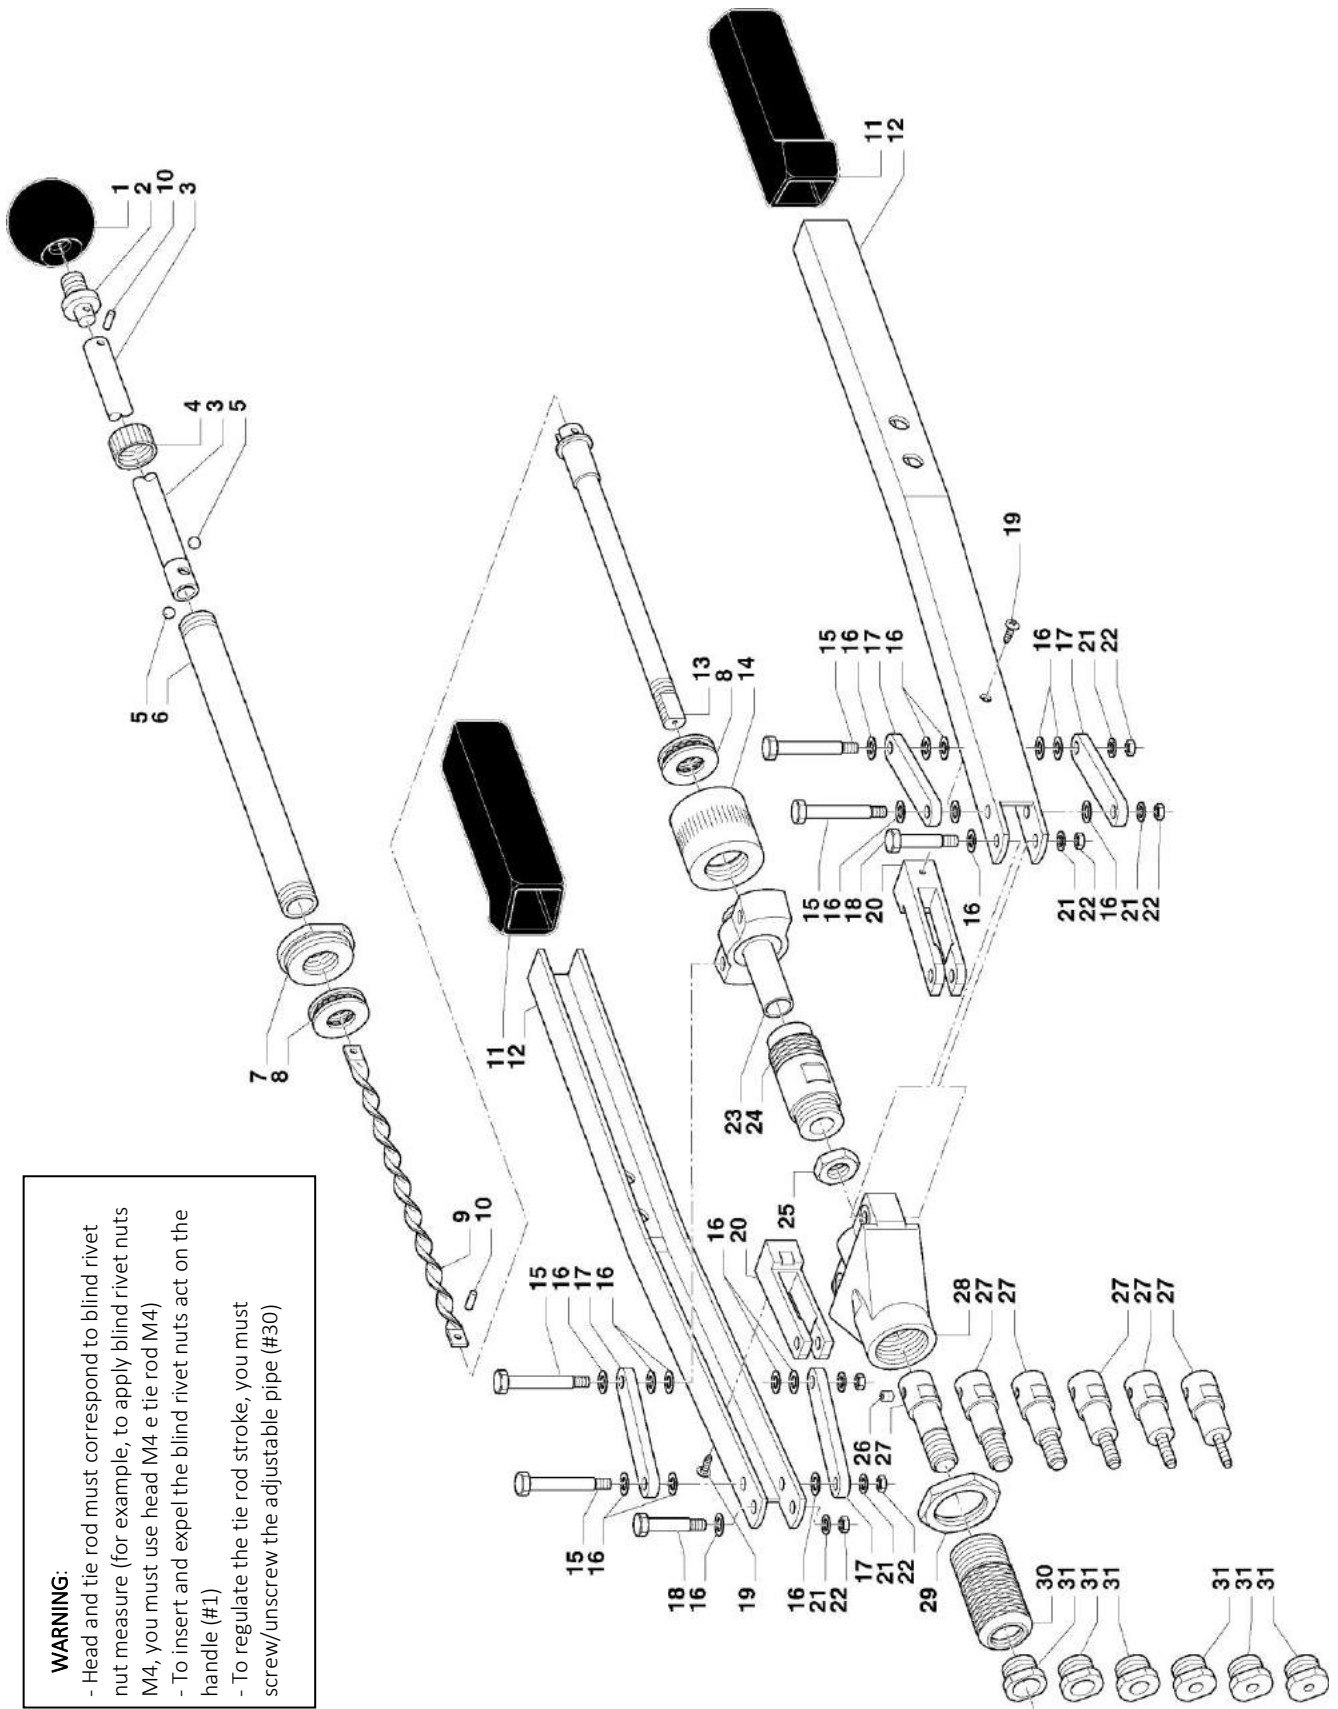

WARNING:

- Head and tie rod must correspond to blind rivet nut measure (for example, to apply blind rivet nuts M4, you must use head M4 e tie rod M4)
- To insert and expel the blind rivet nuts act on the handle (#1)
- To regulate the tie rod stroke, you must screw/unscrew the adjustable pipe (#30)

